

| Standard Mode | Compact Mode | DMX Value | Channel Functions |
|---------------|--------------|-----------|---------------------------|
| 1 | 1 | 0—255 | Pan |
| 2 | * | 0—255 | Pan Fine |
| 3 | 2 | 0—255 | Tilt |
| 4 | * | 0—255 | Tilt Fine |
| 5 | 3 | 0—255 | Pan/Tilt Speed |
| 6 | 4 | | Micro |
| | | 0—19 | Blank |
| | | 20—24 | Eco Mode(Lamp power 230W) |
| | | 25—129 | Blank |
| | | 130—139 | Lamp on by controller |
| | | 140—149 | Pan/Tilt Reset |
| | | 150—159 | Blank |
| | | 160—169 | Effect Reset |
| | | 170—199 | Blank |
| | | 200—209 | Light Reset |
| | | 210—229 | Blank |
| | | 230—239 | Lamp off by controller |
| | | 240—255 | Blank |
| 7 | 5 | | Color Wheel |
| | | 0—8 | White |
| | | 9—17 | Deep Red |
| | | 18—26 | Deep Blue |
| | | 27—35 | Yellow |
| | | 36—44 | Green |
| | | 45—53 | Magenta |
| | | 54—62 | Azure |
| | | 63—71 | Red |
| | | 72—80 | Deep Green |
| | | 81—89 | Amber |
| | | 90—98 | Blue |
| | | 99—107 | Orange |
| | | 108—116 | Cooling |
| | | 117—127 | Blacklight Blue |
| | | 128—129 | White |
| | | 130—134 | Blacklight Blue + Cooling |
| | | 135—138 | Cooling + Orange |
| | | 139—143 | Orange + Blue |
| | | 144—147 | Blue + Amber |
| | | 148—152 | Amber + Deep Green |
| | | 153—157 | Deep Green + Red |
| | | 158—161 | Red + Azure |
| | | 162—166 | Azure + Magenta |
| | | 167—171 | Magenta + Green |
| | | 172—176 | Green + Yellow |
| | | 177—180 | Yellow + Deep Blue |

| | | | |
|----|---|---------|--|
| | | 181–185 | Deep Blue + Deep Red |
| | | 186–189 | Deep Red + White |
| | | 190–220 | Forwards rainbow effect from fast to slow |
| | | 221–250 | Backwards rainbow effect from slow to fast |
| | | 251–255 | Random colour selection by audio control |
| 8 | * | | Blank |
| 9 | 6 | | Blank |
| 10 | 7 | | Fixed Gobo |
| | | 0–3 | Blank |
| | | 4–9 | Gobo 1 |
| | | 10–15 | Gobo 2 |
| | | 16–21 | Gobo 3 |
| | | 22–27 | Gobo 4 |
| | | 28–33 | Gobo 5 |
| | | 34–39 | Gobo 6 |
| | | 40–45 | Gobo 7 |
| | | 46–51 | Gobo 8 |
| | | 52–57 | Gobo 9 |
| | | 58–63 | Gobo 10 |
| | | 64–69 | Beam reducer 1 |
| | | 70–75 | Beam reducer 2 |
| | | 76–87 | Beam reducer 3 |
| | | | Shaking gobos from slow to fast |
| | | 88–95 | Gobo 1 |
| | | 96–103 | Gobo 2 |
| | | 104–111 | Gobo 3 |
| | | 112–119 | Gobo 4 |
| | | 120–127 | Gobo 5 |
| | | 128–135 | Gobo 6 |
| | | 136–143 | Gobo 7 |
| | | 144–151 | Gobo 8 |
| | | 152–159 | Gobo 9 |
| | | 160–167 | Gobo 10 |
| | | 168–175 | Beam reducer 1 |
| | | 176–183 | Beam reducer 2 |
| | | 184–199 | Beam reducer 3 |
| | | 200–255 | Forwards fixed gobo wheel rotation from fast to slow |
| 11 | 8 | | Rotating gobo wheel |
| | | 0–8 | Blank |
| | | 9–17 | Gobo 1 |
| | | 18–26 | Gobo 2 |
| | | 27–35 | Gobo 3 |
| | | 36–44 | Gobo 4 |
| | | 45–53 | Gobo 5 |
| | | 54–62 | Gobo 6 |
| | | 63–71 | Gobo 7 |
| | | 72–80 | Gobo 8 |
| | | 81–89 | Gobo 9 |

| | | | |
|----|----|---------|--|
| | | | Shaking gobos from slow to fast |
| | | 90–97 | Gobo 1 |
| | | 98–106 | Gobo 2 |
| | | 107–115 | Gobo 3 |
| | | 116–124 | Gobo 4 |
| | | 125–133 | Gobo 5 |
| | | 134–142 | Gobo 6 |
| | | 143–151 | Gobo 7 |
| | | 152–160 | Gobo 8 |
| | | 161–169 | Gobo 9 |
| | | 171–179 | Gobo 9 Stopping |
| | | 180–217 | Forwards from fast to slow |
| | | 218–255 | Forwards from slow to fast |
| 12 | 9 | | Gobo Rotation |
| | | 0–127 | Indexing |
| | | 128–177 | Backwards gobo rotation from slow to fast |
| | | 178–203 | Stop |
| | | 204–255 | Forwards gobo rotation from fast to slow |
| 13 | * | 0–255 | Blank |
| 14 | 10 | | Prism |
| | | 0–19 | Blank |
| | | 20–75 | 6-facet linear rotating prism |
| | | 76–255 | 8-facet circular rotating prism |
| 15 | 11 | | Prism Rotation |
| | | 0–127 | Indexing |
| | | 128–191 | Forwards gobo rotation from fast to slow |
| | | 192–193 | Blank |
| | | 194–255 | Backwards gobo rotation from slow to fast |
| 16 | 12 | | Frost |
| | | 0–64 | Blank |
| | | 65–255 | Frost from 0% to 100% |
| 17 | 13 | 0–255 | Zoom |
| 18 | * | 0–255 | Blank |
| 19 | 14 | | Focus |
| | | 0–255 | Continuous adjustment from far to near |
| 20 | * | 0–255 | Blank |
| 21 | * | 0–255 | Blank |
| 22 | 15 | | Shutter/Strobe |
| | | 0–31 | Shutter closed |
| | | 32–63 | Shutter open |
| | | 64–95 | Strobe-effect from slow to fast |
| | | 96–127 | Strobe open |
| | | 128–143 | Closing pulse in sequences from fast to slow |
| | | 144–159 | Opening pulse in sequences from slow to fast |
| | | 160–191 | Shutter open |
| | | 192–223 | Random strobe-effect from slow to fast |
| | | 224–255 | Shutter open |
| 23 | 16 | | Dimmer |
| | | 0–255 | Dimmer intensity from 0% to 100% |

| | | | |
|----|---|--|-------|
| 24 | * | | Blank |
|----|---|--|-------|